


Fig. 3—1951 Passenger Car Wiring Diagram

SCHEMATIC WIRING DIAGRAM

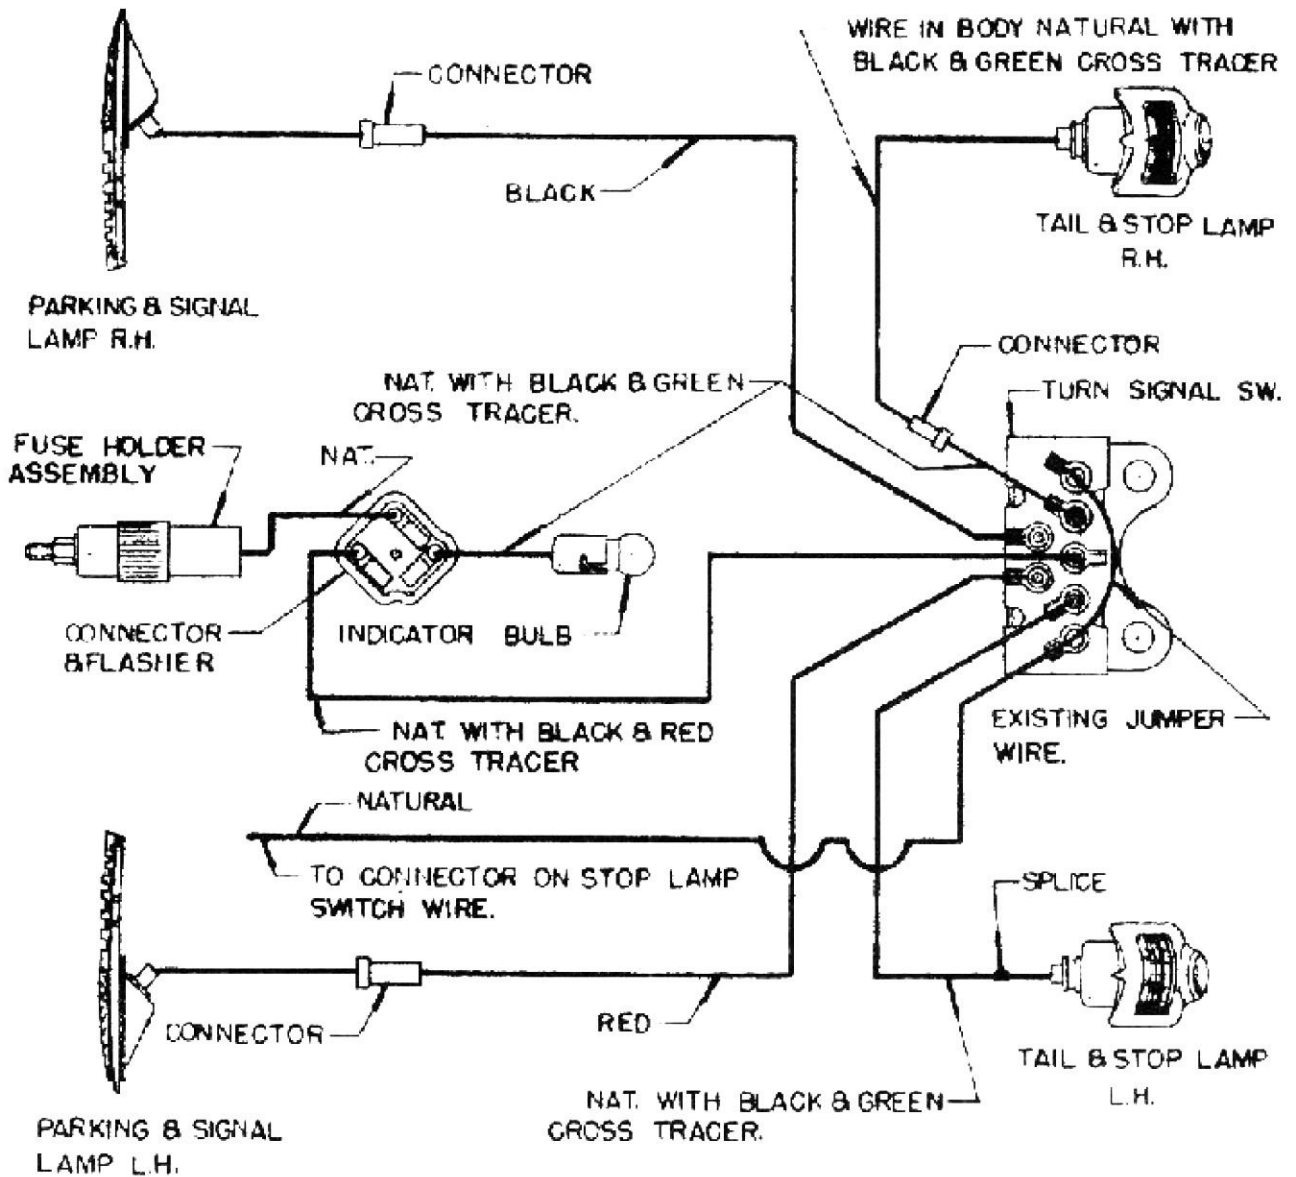

1951 CHEVROLET Passenger Car
Turn Indicator Lighting