

ALL WIRES MARKED \* ARE USED FOR RD ONLY  
 ALL WIRES MARKED ⊗ ARE NOT PART OF A WIRING HARNESS

ALL MODELS EXCEPT 3742 & 3942

MODELS ALL

### 1954 CHEVROLET TRUCK WIRING DIAGRAM

3742 & 3942 ONLY




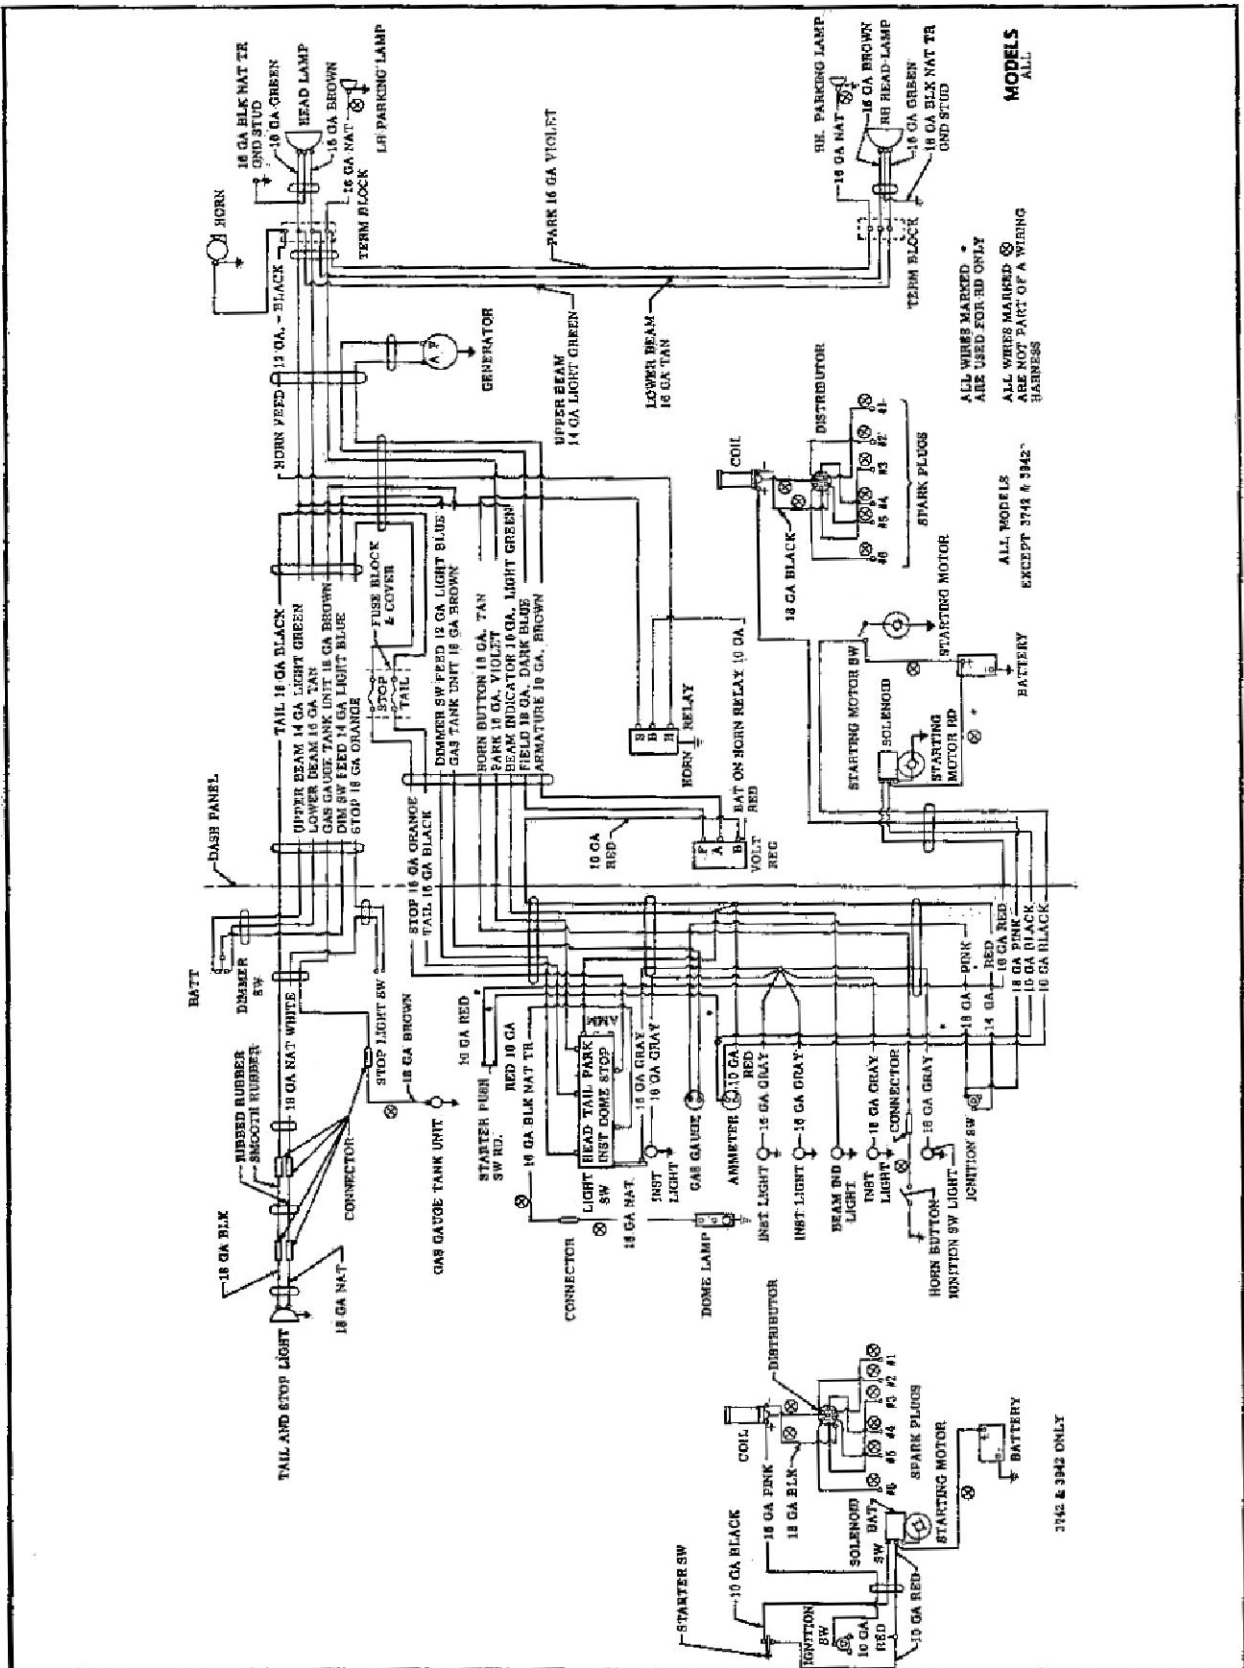


Fig. 15-1954 Truck Wiring Diagram

986938 DIRECTIONAL SIGNALS



WIRING DIAGRAM 986937 DIRECTIONAL SIGNAL

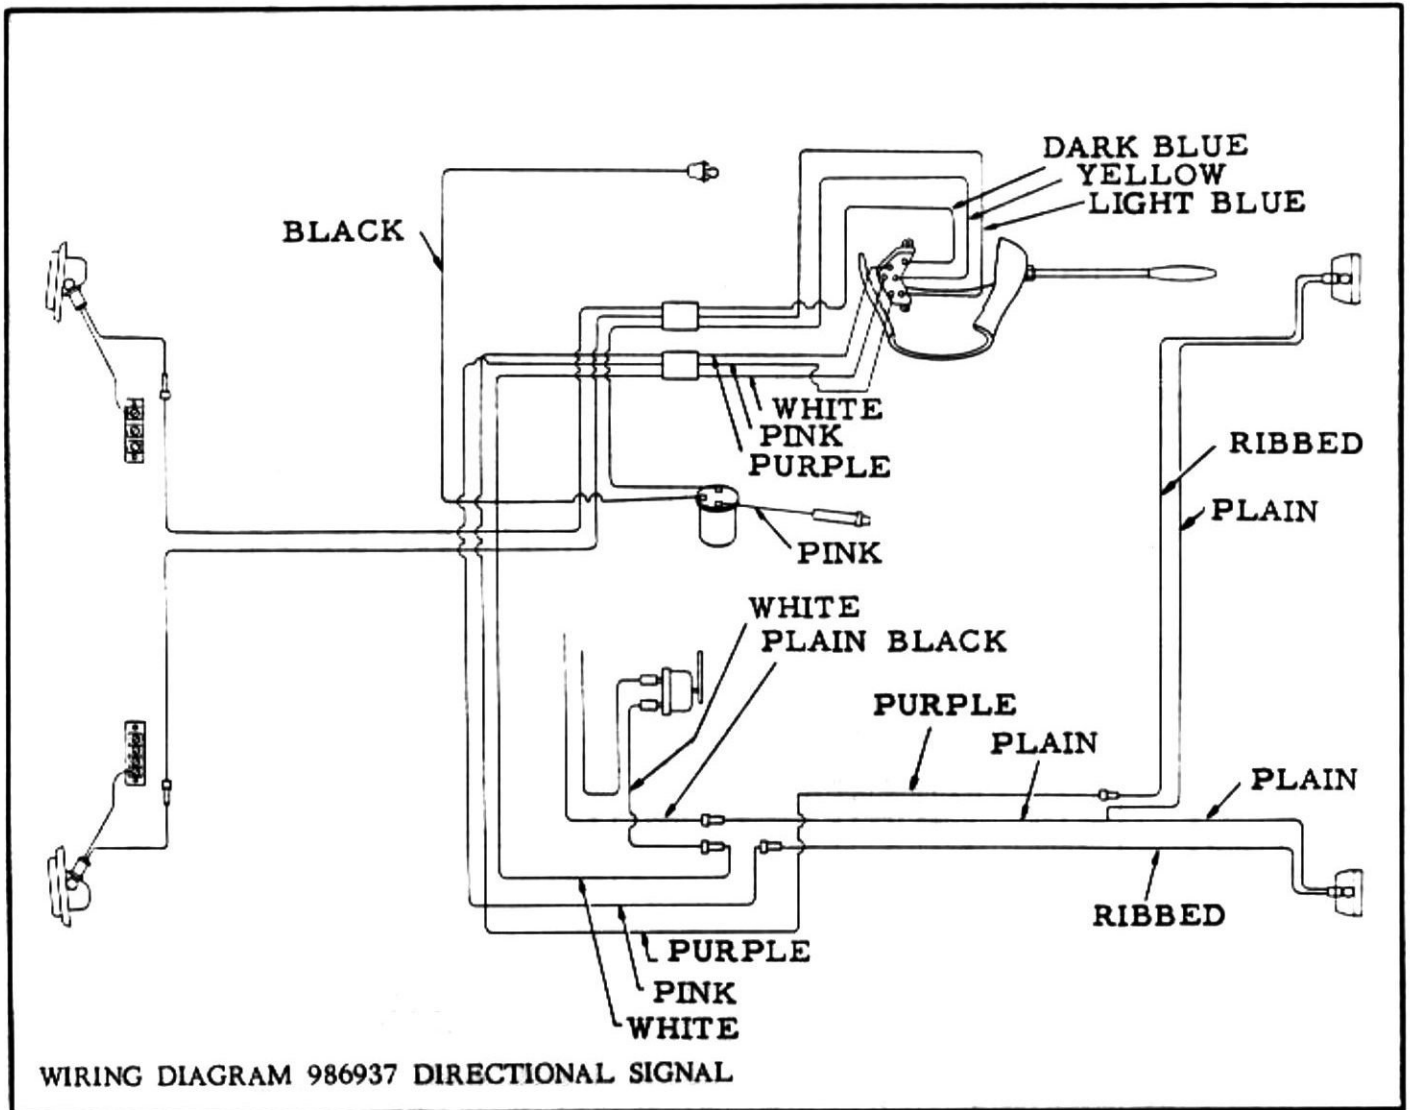