


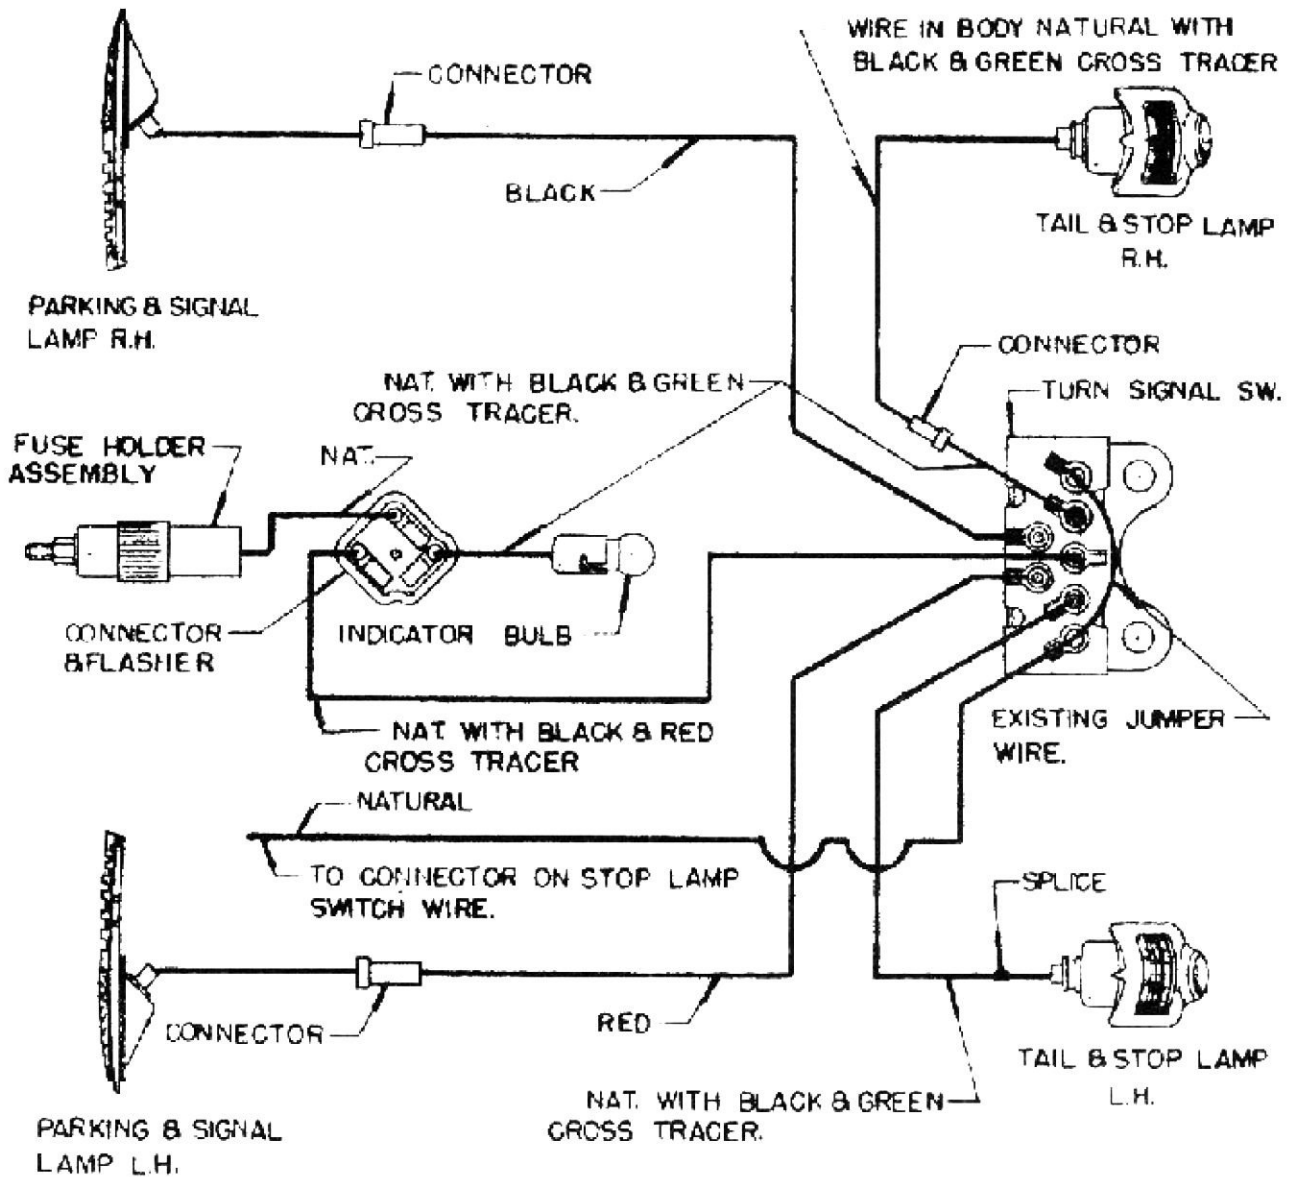

## SCHEMATIC WIRING DIAGRAM



1952 CHEVROLET Passenger Car  
Turn Indicator Lighting